

Saxophone Maintenance

Presented by KBI Music Shoppe

Guidance for you and your parents!!!

A saxophone is a big responsibility and will require a lot of special attention to keep it in working condition! Remember you are in charge of taking good care of this instrument as it is your new responsibility! It is recommended that only people who have musical training to assemble, play, or clean your instrument!

Never EVER EVER EVER

1. Get your saxophone wet! Water will damage your pads!!
2. Use any product other than cork grease on your instrument.
3. Grab your instrument by the keys! The metal bends easily!
4. Use hot water to clean your mouthpiece!
5. Set your instrument down on the keys!!!!
6. Try and adjust your saxophone yourself! Take it to a music store because if you adjust it yourself it can cause serious damage!



Daily Care:

1. Remove saxophone from case without squeezing the keys.
2. Always wipe the neck joint with a soft cloth before putting it together! Only use cork grease on the mouthpiece cork!
3. Use a gentle back and forth motion to twist the saxophone together. Don't push the mouthpiece halfway past the cork!
4. Don't over tighten your ligature! This will make it harder to play or break your reed!
5. Before putting your sax away, run your swab through to get all the spit and extra residue left in you instrument!
6. Take your reed off the mouthpiece and store it in a reed guard so it doesn't warp or mold!
7. ALWAYS store your instrument in its case!

Monthly Care:

1. Check all of your screws and keys!
2. If any seem loose, take it to a music repair store so that they can fix it properly!

Yearly Care:

Get your instrument in to be inspected by a professional to make sure your instrument is in optimal working condition!